

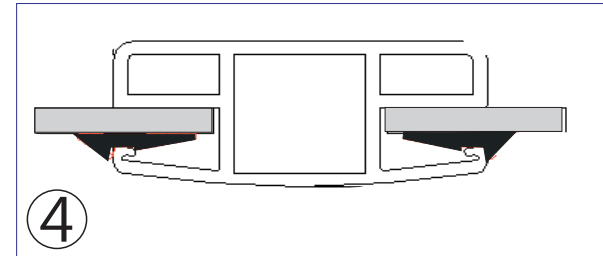
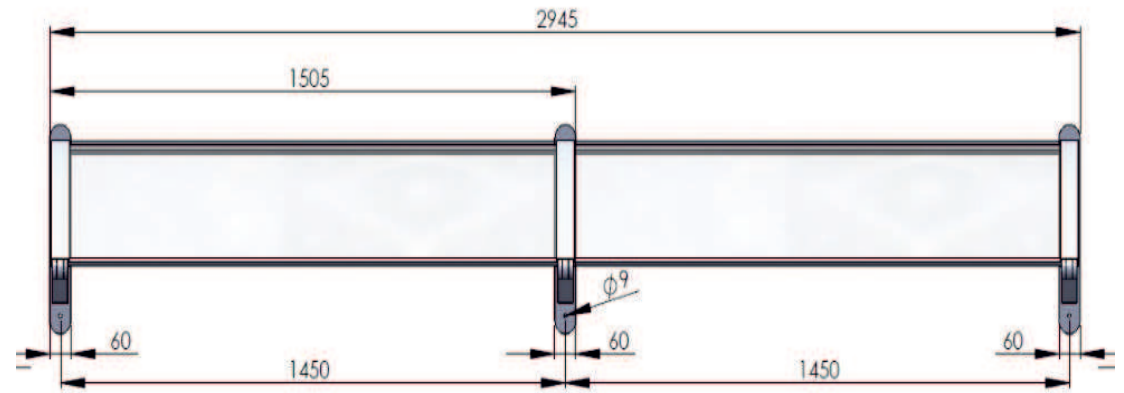
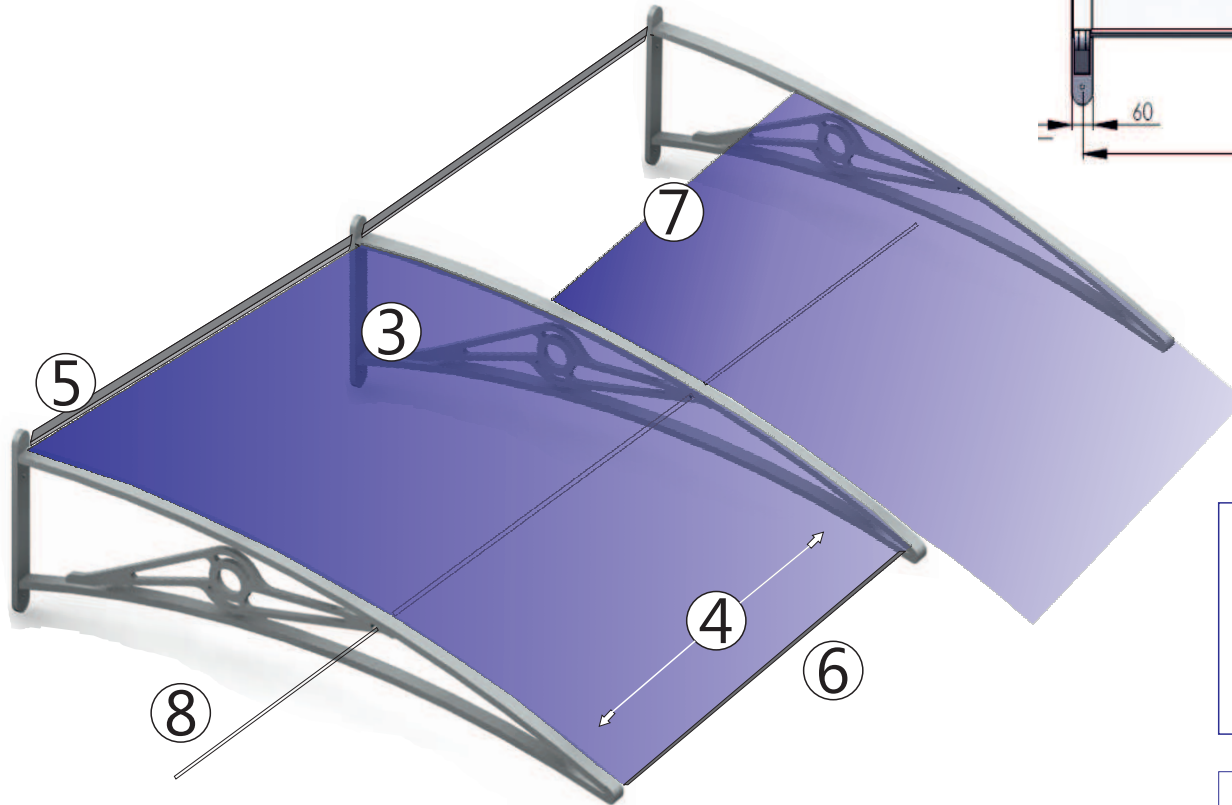


TRANSPAFORZA



TF Pro Lux Serial INSTALLATION

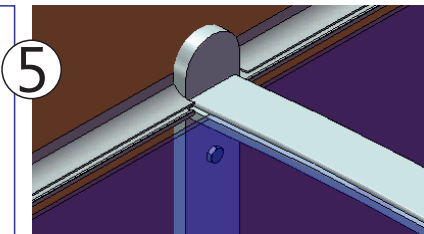



4 Roof sheet Profile & rubber

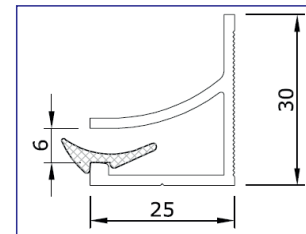

5 Rear Profile & rubber

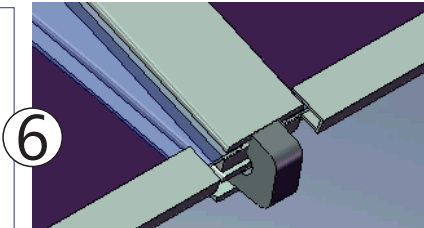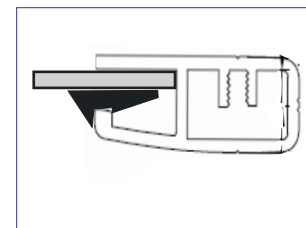

6 Front Profile & rubber

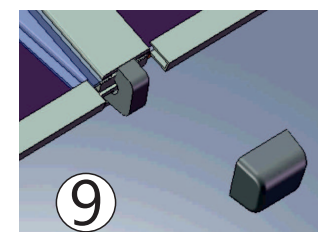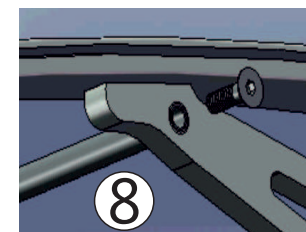


8 Support tube and screw


9 Nose cover caps

- 1 Prepare The Wall Holes
- 2 Screw the arms to the wall
- 3 Place and slide the roof sheets
- 4 Compress the rubber seal and stabilize the roof sheets from under side .
- 5 Compress the rubber seal to rear profile and fix the roof sheets, than silicone the rear side of profile to the wall.
- 6 Insert the front profile between the arms and fix them with the rubber
- 7 Make the same process for the additional kits
- 8 Place the aluminum tube between the arms and squeeze the nuts.
- 9 Close the nose with nose cover caps.


Connexion en série TF Standard

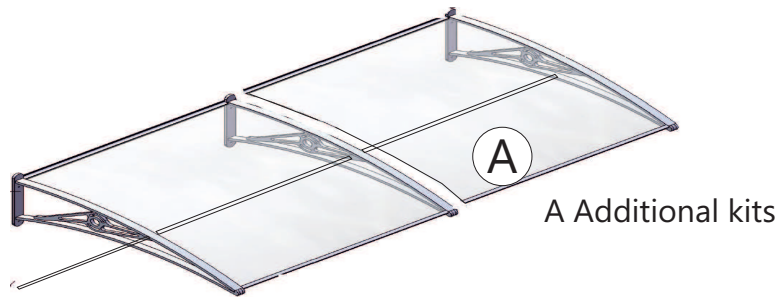

Connection of aluminum support tube

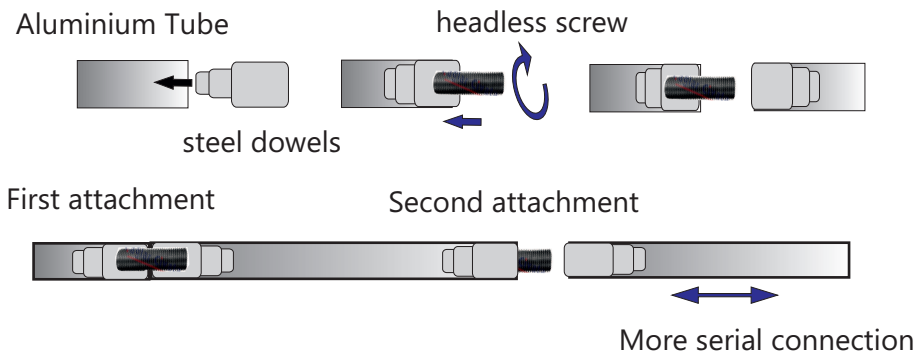

Required Tools

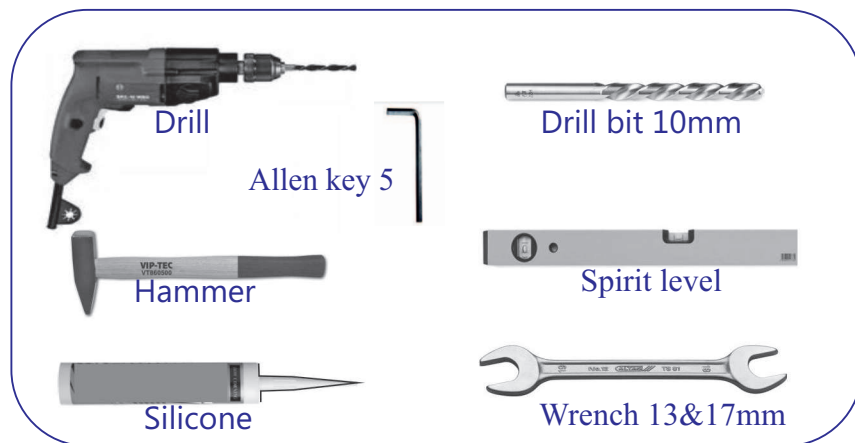

TRANSPAFORZA®
Canopies



TF Pro Lux Serial
Single & Serial Applications